# Contents

## Quick Reference Guide

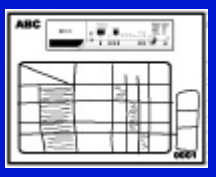


Programme Chart

- Preparing the Laundry
- Selecting a Programme and Options
- Starting and Completing a Programme
- Changing a Programme
- Interrupting a Programme
- Daily Maintenance and Cleaning


## Instructions for Use

Booklet

- Before Using the Dryer / Connections
- Precautions and General Recommendations
- Description of the Dryer
- Vent Connection
- Door Reversibility
- Troubleshooting Guide / After-Sales Service

# Before Using the Dryer / Connections

### 1. Removing the packaging and check

- After unpacking, make sure that the dryer is undamaged. If in doubt, do not use the dryer. Contact After-Sales Service or your local retailer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.

### 2. Electrical Connections

- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Electrical connection must comply with local Electricity Board regulations.
- Voltage information, power consumption and the required fuse protection is shown on the rating plate mounted at the rear of the dryer.
- The manufacturer cannot accept any liability for personal injury or damage to property resulting from failure to adhere to these instructions.
- The dryer must be earthed as prescribed by law.
- Do not use extension leads or multiple adaptors.
- Before any maintenance on the dryer disconnect it from the mains supply.
- Do not operate the dryer if it has been damaged during transport. Contact one of our After-Sales Service technicians.
- Mains cables must be replaced by an original cable and is only to be carried out by a technician from After-Sales Service or an authorized electrician.
- After installation access to the mains plug has to be guaranteed, or the all-pole disconnection has to be possible with a switch.

### 3. Installation

- Do not install your dryer where it can be subject to extreme conditions, such as: poor ventilation, temperatures around freezing (or above 35°C).
- Remove the protective foil from the control panel.

**Stability:**

When installing the dryer always carefully level the dryer adjusting the two feet and check the correct levelling with a spirit level.

**To built in the dryer**

- For security reason do not remove the worktop.
- Connect the dryer to an external ventilation system in order to prevent steam from damaging your furniture during the years.

**Stacking kit**

Your dryer can be stacked on top of your front loading washing machine. To do this, use stacking kit AMH 752, available at your dealer.

**Minimum housing dimensions:**

Width: 600 mm
Height: 850 mm
Depth: 560 mm

INTELLIGENT DIALOGUE

# Precautions and General Recommendations

## 1. Packing

The packing box may be fully recycled as confirmed by the ♺ recycling symbol.

## 2. Energy saving tips

- Always dry a full load: depending on the type of laundry and the programme/drying time.
- By preference use the maximum spin speed allowed by your washing machine, since draining the water mechanically requires less energy.
- Do not overdry the laundry.
- Clean the lint filter after **every** drying cycle.
- Place your dryer in a room with a temperature between 15°C and 20°C. In case of higher temperature ventilate the room.
- Always select the correct programme/drying time for the load in order to obtain the desired drying results.
- Select the *gentle* option only with small loads.
- When drying cotton, for example: dry *iron dry* and *cupboard dry* loads together. Start with the *iron dry* programme/drying time setting, remove the laundry to be ironed at the end of that cycle and dry the remainder of the load on the *cupboard dry* setting.

## 3. Disposing of packaging and old appliances

The dryer is built from reusable materials. The dryer must be disposed of in compliance with local waste disposal regulations.

- Before scrapping, cut off the power cable so that the dryer cannot be connected to the mains.

## 4. Child safety

Children must not be allowed to play with the dryer.

## 5. General recommendations

- Always set the programme/time selector knob to the "0" position after use. This prevents the dryer from being switched on accidentally.
- Before cleaning or carrying out maintenance, switch off the dryer and disconnect it from the mains supply.
- To clean the outside of the dryer, use a neutral detergent and a damp cloth.
- Do not use abrasive detergents.

### Clean the lint filter at the end of every drying cycle:

1. Open the door.
2. Pull the filter upwards.
3. Remove lint using a soft brush or your fingertips.
4. Push the filter firmly back into place.

- Wipe away lint from the door seal and the door using a damp cloth.
- If the lint filter mesh is clogged, clean it with water and a soft brush.
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.

### EC Declaration of Conformity

- This dryer has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:
  - 73/23/EEC Low Voltage Directive
  - 89/336/EEC EMC Directive
  - 93/68/EEC CE Marking Directive.

CE

The dryer must be used in the household for the described uses.

## Description of the Dryer

**A.** Work top

**B.** Contact pin

**C.** Door

To open the door: pull the handle.

To close the door: push gently until closed.

**D.** Filter

**Reminder - Maintenance and Cleaning**

**Filter**

Clean the lint filter at the end of every drying cycle:

Open the door.

Pull the filter upwards.

Remove lint using a soft brush or your fingertips.

INTELLIGENT DIALOGUE

# Vent Connection

In some dryer models the vent hose together with an adaptor is supplied in the drum. If the hose and adaptor are not supplied as a standard the optional accessory AMH577 kit, available at your dealer, can be used.

### Installing the vent hose

**A.** Place a towel or the packing material on the right-hand side next to the dryer.

**B.** Place the dryer on its right-hand side (seen from the front) on the towel or the packing material.

**C.** Push the adapter into the hose (see illustration). Attach the air vent hose adapter to the connection located under the dryer and lock it by means of the foreseen lugs.

### Venting outside

- Without kinking it, lead the vent hose outside (inside diameter 10cm, maximum length with two bends 3m).
- Ensure that the vent hose does not sag when stacking the dryer on a washing machine. It should only be placed horizontally or upwards.
- Do not connect to ventilation systems protected by fly nets. These can become clogged and cause malfunctioning of the dryer.
- Never connect the air vent hose to a chimney or to a mechanical ventilation extractor duct.
- Do not connect the vent hose to the heating system. Only connect the hose to ventilation systems insulated against humidity.

### Dryer operation without vent hose

- Only use the dryer in a large, well-ventilated room.
- Keep the room free of dust.

  A minimum distance of 10cm between rear of appliance and the wall must be observed.

### Dryer placed close to the wall; venting to the left or right

Install the dryer by using the bi-directional kit AMH869, available at your dealer, should be used.

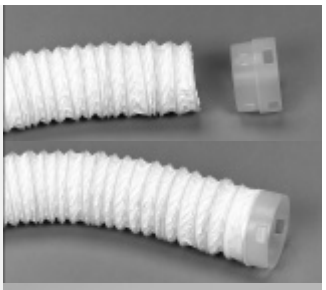

# Door Reversibility

**Door Reversibility**

**A. Unplug the dryer.**

**B.** Open the door.

**C.** Using a spanner, turn the contact pin on the inside of the door (top) through 90° and remove it.

**D.** Remove the 2 door hinge screws, followed by the door.

**E.** Unscrew the 2 screws above and below the door lock system.

**F.** Removing the door lock: using a screwdriver, press down on the small rib in the upper opening and extract the door lock by pulling it towards you.

**G.** Reverse the door:

**H.** Fasten the door on the desired side using the 2screws.

**I.** Insert the door lock system on the opposite side and lock it securely.

**J.** Fix the 2 screws above and below the door lock system.

**K.** Replace the contact pin in the inside of the door (top).

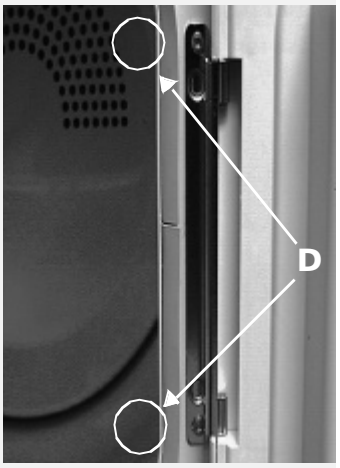


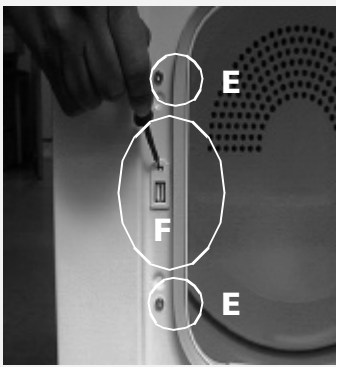

INTELLIGENT DIALOGUE

# Troubleshooting Guide / After-Sales Service

## Troubleshooting Guide

**If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:**

**Drying takes too long / laundry is not dry enough:**

- Was the correct programme selected?
- Was the inserted laundry too wet (Washing machine spin speed less than 800rpm)?
- Is the lint filter dirty (filter indicator lamp on)?

**The dryer does not operate:**

**(following a power failure and/or interruption to the mains supply, always press the Start button).**

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door well closed?
- Has the programme been selected?
- Has the start delay option been selected?
- Has the **Start/Pause** button been pressed?

**Lint filter indicator lamp on:**

- Is the lint filter clean?
- Is the vent hose blocked?

## After-Sales Service

**If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).**

**Please specify:**

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- Your full address and phone number.

Ecological Paper

Printed in Italy

5019 108 00454

GB

1/ 0501